

1

User Guide



The Portable Baby Rocker



Thank you for buying the Rockit portable baby rocker. It can be fitted to most prams and strollers. It gently rocks to soothe your baby to sleep and is suitable for use with children aged 0-36 months. Please read this guide carefully before use.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.

2

Safety

WARNING: THIS IS NOT A TOY

- Please read the user guide carefully and keep for future reference.
- To be assembled and used by adults only. Not to be used by persons under the age of 14.
- Only to be used on prams and strollers. Do not use on cribs, cots or car seats.
- Always ensure that strollers and prams are on a level surface and the brake is firmly applied before attaching and operating the Rockit.
- The Rockit should be positioned out of reach of the child.
- Adult supervision required. Do not leave the child unattended.
- Babies are safest sleeping flat and on their backs up to the age of 6 months.
- Regularly check that the product is firmly attached to the stroller or pram.
- Discard if the product is damaged.
- After use, remove the Rockit from the bracket and store in a safe place, out of reach of children.

What's in the Box?



1 x Rockit



1 x Universal bracket



1 x User Guide

3

Setting up the Rockit

Installing the batteries:



1. Undo retaining screw. (Screw will not fall out).



2. Twist to unlock top casing and remove.



3. Undo the battery compartment screw and remove lid.



4. Insert 4 x AA batteries making sure that the flat end of each battery (negative) touches the contact spring.



5. To reassemble reverse steps 1-3.

Never mix rechargeable batteries with non-rechargeable batteries. Different types of batteries or new and used batteries are not to be mixed. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the product before being charged. Rechargeable batteries are only to be charged under adult supervision. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. The supply terminals are not to be short-circuited.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


4

Fitting the Bracket


The Rockit bracket can be fixed to any bar on the stroller or pram, but we recommend it is fitted high up and as close to vertical as possible. This ensures that the Rockit works efficiently and battery life is increased. It should always be positioned out of reach of the child.



Always ensure that strollers and prams are on a level surface and the brake is firmly applied before attaching and operating the Rockit.

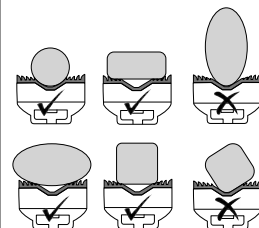

The universal bracket fits most tube shapes.

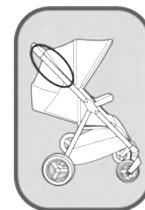

Ideal positioning of the bracket is shown above.




1. Attach the bracket, making sure it is the correct way up.



2. Pull the strap as tight as possible and check that it is secure.



3. Tuck the loose end of the strap into the retaining slot.

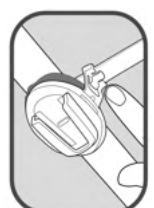

4. The strap can be repositioned by pressing the release button with one hand and pulling the strap out with the other.


Spare brackets can be purchased from our website www.rockitrocker.com/buy

5

Operating the Rockit



1. Ensure the stroller or pram is on a level surface. Always apply the brake.

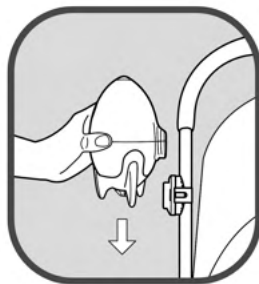

2. Push the Rockit clip into the bracket until it clicks. Check it is securely mounted.



3. Press the on/off button to start or stop the Rockit.
Note: The Rockit will automatically turn itself off after 30 minutes.



4. Turn the speed dial to obtain the preferred gentle rocking motion. Note: The Rockit will start again at the same speed as previously set.

After use, carefully remove the Rockit from the bracket and store in a safe place, out of reach of children. Do not leave the Rockit fitted when not in use.

6

Troubleshooting

Rockit is running too fast or too slow

Adjust the speed dial on the base of the Rockit. Turning clockwise increases the speed, while anticlockwise decreases the speed.

The bracket is moving in use

Ensure the strap is pulled as tight as possible. For strollers or prams with very shiny, round tubes, it may be easier to secure the bracket to the padded handle.

The Rockit has stopped working

The 30 minute timer automatically switches the Rockit off. Press the on/off button to restart.

The Rockit won't start, or is running very slowly

Turn up the speed dial on the base of the Rockit by turning it clockwise to increase the speed. Hold it vertically, with the button pointing up and turn on again to test. If it still doesn't work, please replace the batteries and ensure they are fitted correctly, making sure that the flat end of each battery (negative) touches the contact spring.

The Rockit works for a second and then stops

Hold vertically to test with button pointing up. Turn up speed and try again.

Battery life is limited

To increase battery life, we recommend using good quality alkaline batteries or NiMH rechargeables. Cheaper batteries do not have the capacity to spin the heavy weight inside the Rockit.

The Rockit works most efficiently when mounted as close to vertical as possible and high up on the stroller frame. Often a slower speed works effectively, which also increases the battery life.

7

Frequently Asked Questions

What age child can I use the Rockit with?

The Rockit is suitable for use with children from birth up until around 3 years old.

Is the rocking motion safe?

Yes. We have based the rocking motion on the way parents rock their children by hand. For more information visit www.rockitrocker.com/safety

How can I increase the battery life?

Mount the Rockit as close to vertical as possible and try a slower speed as this will often work just as effectively.



Can I use the Rockit on a cot, crib or car seat?

No. The Rockit is designed for strollers and prams only.

Why is there a 30 minute timer on the Rockit?

The Rockit is not designed to keep a child asleep for an extended period. It is meant to be a helping hand to soothe a baby and help them drift off to sleep or maintain their sleep when the stroller or pram stops.

Can the Rockit be used in the rain?

Yes, the Rockit is showerproof. (Tested to IPX1 standards). Avoid exposure to prolonged or heavy rain.

Can I buy additional brackets to fit the Rockit to other strollers or prams?

Yes, these can be purchased from our website www.rockitrocker.com/buy

8

Additional Info

The Rockit was proudly designed in the UK by N2M Ltd. Discover more at www.rockitrocker.com

For our troubleshooting guide and customer support visit www.rockitrocker.com/support

Address: N2M Ltd, 7 Unity Street, Bristol, BS1 5HH, UK.



For videos showing how to set up and use the Rockit scan the QR code or visit www.rockitrocker.com/video

 [facebook.com/wearerockit](https://www.facebook.com/wearerockit)

 twitter.com/wearerockit

 [instagram.com/rockitrocker](https://www.instagram.com/rockitrocker)

Made in China

Patent pending - www.rockitrocker.com/patent

"Rockit" is a trade mark of N2M Ltd.

For details of our trade marks and design registrations please visit: www.rockitrocker.com/IP



Rockit is a registered trade mark. © 2017 N2M Ltd. All rights reserved.